



Quick Guide

AirID® Firmware Update



 English

 Mac OS

 Windows

Intended use

The AirID® is a card reader that you can carry with you at all times. It provides a secure wireless connection to your equipment and encrypts and decrypts all data.

Support

Please contact:

Unicept GmbH

Osterstraße 3
30159 Hanover
Germany

Tel.: +49 (0) 511 16 99 75 71

Fax: +49 (0) 511 16 99 75 73


Mail: support@unicept.de

Web: www.unicept.de

All rights reserved – Unicept GmbH

AirID® –Firmware Update (Windows 8 + 10, Mac OS)

1. Remove Smartcard from AirID®.
2. While pressing jog dial, connect AirID® with USB-cable to a windows computer or Mac.
3. The display should show:

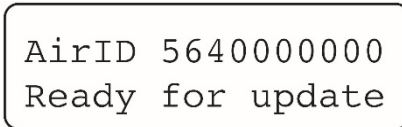

```
AirID 5640000000
Ready for update
```

4. Open folder with firmware update.
5. With Windows

Open the file "**AirID_FW_CC2540.bat**".

With Mac OS:

Open the file "**AirID_FW_CC2540.command**".

6. The firmware update is processing, if the process is interrupted, fail or the AirID® is not starting, restart on point 1.

Flashing Page
100

7. After flashing successfully, the AirID® is rebooting. You can now remove the USB-cable and reinsert your Smartcard.
8. In rare cases, especially when updating from a very old version it is possible that all Bluetooth pairing information is lost. In this case it could be necessary to remove the AirID® from all devices and pair them again. If so, please deactivate the connection on AirID®, remove the connection on your devices, activate the connection on AirID® and pair again.